


GE
Security

Fiber Optic Transmission System
Data, Audio and Contact Closure
Models S751DA and S7751DA

installation instructions

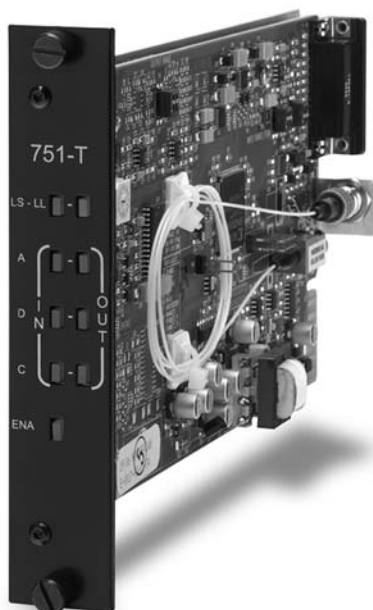

imagination at work

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TABLE OF CONTENTS

| | |
|---|-----------|
| BEFORE YOU BEGIN | 6 |
| 1 INTRODUCTION | 7 |
| 2 MODULE SETUP | 8 |
| 2.1 UNPACKING THE UNIT | 8 |
| 2.2 DATA TRANSLATION | 8 |
| 2.3 INPUT/OUTPUT DATA FORMAT | 9 |
| 2.3.1 MANUAL DATA SELECTION | 9 |
| 2.3.2 AUTO DATA CONFIGURATION | 10 |
| 2.4 OPTICAL ALARM | 11 |
| 2.5 AUDIO LEVEL | 11 |
| 2.6 INPUT IMPEDANCE | 11 |
| 3 INSTALLATION | 12 |
| 3.1 RACK CARDS | 12 |
| 3.2 501R RACK CARD ENCLOSURES | 12 |
| 3.3 CONNECTIONS | 13 |
| 3.3.1 BACK PANEL CONNECTIONS | 14 |
| 3.3.2 INTERFACE BOARD CONNECTIONS | 15 |
| 3.3.3 BUILT-IN TERMINATION | 18 |
| 3.3.4 AUDIO CONNECTIONS | 19 |
| 3.3.5 FIBER OPTIC CABLE CONNECTIONS | 19 |
| 3.3.6 STANDALONE MODULE POWER CONNECTIONS | 19 |
| 3.3.7 RACK MODULE POWER CONNECTIONS | 20 |
| 4 OPERATION | 21 |
| 4.1 NORMAL OPERATION | 21 |
| 4.2 TEST MODE | 21 |
| 5 TROUBLESHOOTING | 23 |
| 5.1 LED OPERATION | 23 |
| 5.1.1 LASER (LS) INDICATOR | 23 |
| 5.1.2 LEVEL/LOSS (LL) INDICATOR | 23 |
| 5.1.3 AUDIO (A) IN/OUT INDICATORS | 24 |
| 5.1.4 DATA (D) IN/OUT INDICATORS | 24 |

5.1.5 CONTACT (C) IN/OUT INDICATORS 24

5.1.6 ENABLED (ENA) IN/OUT INDICATORS 24

5.2 TROUBLESHOOTING..... 24

APPENDIX A: RS485 APPLICATION NOTES 26

A.1 INTRODUCTION 26

A.2 CONNECTION 26

A.3 CONFIGURATION 26

A.3 TERMINATION..... 26

BEFORE YOU BEGIN

Read these instructions before installing or operating this product.

Note: This installation should be made by a qualified service person and should conform to local codes.

This manual provides installation and operation information. To use this document, you must have the following minimum qualifications:

- A basic knowledge of CCTV systems and components
- A basic knowledge of electrical wiring and low-voltage electrical hookups

Intended use

Use this product only for the purpose for which it was designed; refer to the product specification and user documentation.

Customer Support

For assistance in installing, operating, maintaining, and troubleshooting this product, refer to this document and any other documentation provided. If you still have questions, please contact Technical Support and Sales:

GE Security

Call: 888 437-3287 (US, including Alaska and Hawaii; Puerto Rico; Canada)

Outside the toll-free area: 503 885-5700

www.gesecurity.com

Note: You should be at the equipment and ready with details before calling Technical Support.

Conventions Used in this Manual

Boldface or button icons highlight command entries. The following **WARNING**, **CAUTION**, and **Note** statements identify potential hazards that can occur if the equipment is handled improperly:



*** WARNING:**

Improper use of this equipment can cause severe bodily injury or equipment damage.



**** CAUTION:**

Improper use of this equipment can cause equipment damage.

Note: Notes contain important information about a product or procedure.

* This symbol indicates electrical warnings and cautions.

** This symbol indicates general warnings and cautions.

1 INTRODUCTION

This is a guide to the installation and operation of the S751DA and S7751DA series fiber optic audio, data, and contact closure transmission system. Please read the entire manual before installing the equipment.

NOTE: The series numbers S751DAT and S751DAR are used to describe all models of transmitters and receivers unless noted otherwise.

The Series S751DA and S7751DA transmission systems offer simultaneous real-time transmission of:

- One channel of two-way high quality audio (HQA)
- One channel of two-way multi-protocol data (MPD)
- One channels of two-way relay/contact closures

The S751DA system operates over one or two multimode fibers and the S7751DA uses one or two single-mode fibers. A complete system consists of an S751DAT transmitter and an S751DAR receiver. Units are designed for installation in the 515R1 or 517R1 Card Cages or in the 501R rack card enclosure.

2 MODULE SETUP

2.1 UNPACKING THE UNIT

In the event that anything is missing from the following list, contact your authorized dealer or representative.

- S751DAT (S7751DAT) Transmitter or S7751DAR (S7751DAR) Receiver
- User Manual

Save the original packing materials in case it becomes necessary to return the unit.



CAUTION:

Take all necessary precautions to protect the unit from static electricity during the following procedures. Equipment damage may result

2.2 DATA TRANSLATION

The data translation capability of the S751DA series is unique in the industry. It enables translation from one data format to another and eliminates the need for external translation devices.

The translation is in the physical layer only; it cannot interpret specific protocols or translate commands. Due to the encoding schemes utilized in Manchester and Biphase, these formats are exempt from translation. Data translation examples are shown in Table 1.

Table 1. Data Translations

| Translation | TX Switch Setting | RX Switch Setting | Comments |
|-----------------------------|-------------------|-------------------|---|
| TTL to RS232 three-wire | 3 | 1 | Signal level conversion |
| RS232, three-wire to TTL | 1 | 3 | Signal level conversion |
| TTL to RS422 | 3 | 4 | Single ended to differential conversion |
| RS422 to TTL | 4 | 3 | Differential to single ended conversion |
| RS232, three-wire to RS422 | 1 | 4 | Single ended to differential conversion |
| RS422 to RS232, three -wire | 4 | 1 | Differential to single ended conversion |
| RS232, five-wire to RS485 | 2 | 7 - A | RS232 handshaking bit is used to indicate tri-state |
| RS485 to RS232, five-wire | 7 - A | 2 | Tri-State detection circuitry activates handshaking bit |

2.3 INPUT/OUTPUT DATA FORMAT

Determine the data formats required for input and output for both data channels. The data formats may be the same or different for each channel. The data format can also differ from input to output on the same data channel.

2.3.1 MANUAL DATA SELECTION

Using the rotary DATA SELECT switch SW1, select a valid data format for each data channel on both the transmitter and receiver. See Figure 1, Figure 2, and Table 2.

NOTE: The DATA SELECT switch SW1 on the audio/data card is shipped in the Auto Configure setting (position 0).



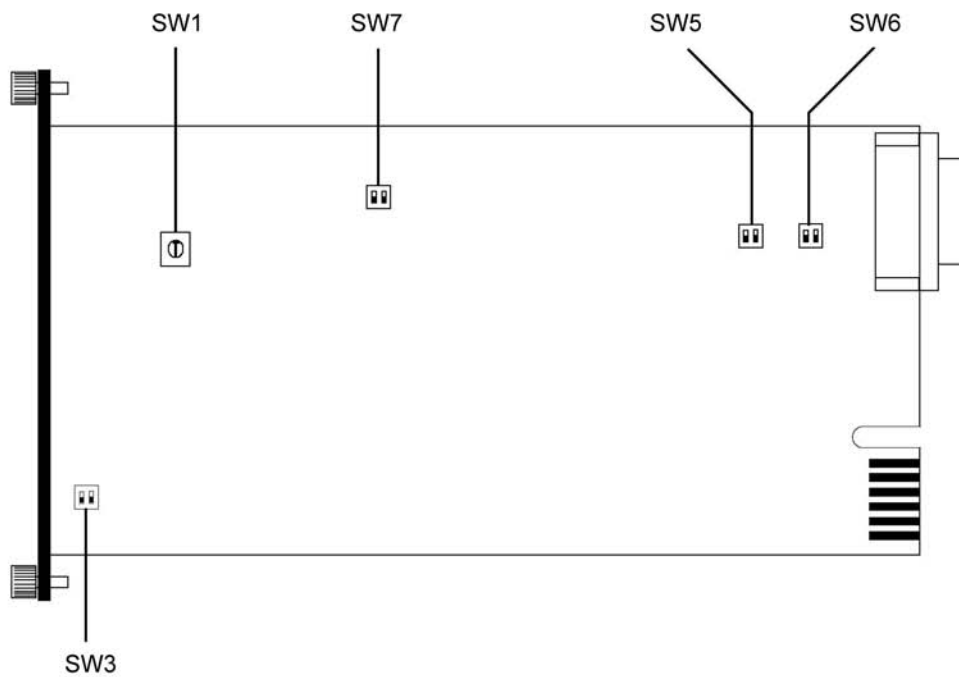


Figure 1. S751DA Location of Switches


SW1
DATA SELECT SWITCH

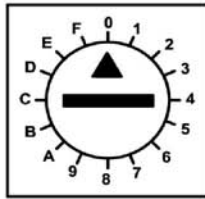


SW3
FIBER/VIDEO ALARM ENABLE SWITCH

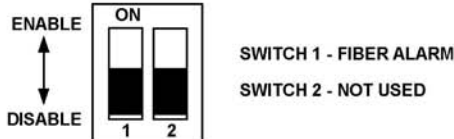

SW5
AUDIO INPUT LEVEL SWITCH

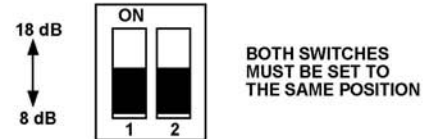

SW6
INPUT IMPEDANCE SELECT SWITCH

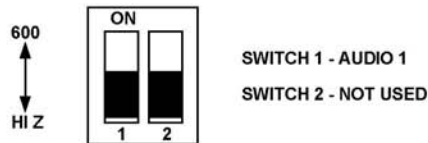

SW7
AUDIO OUTPUT LEVEL SELECT SWITCH

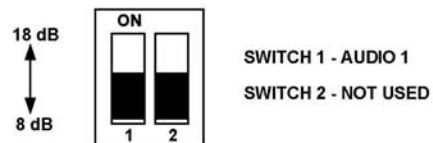


Figure 2. S751DA Configuration Switches

Table 2. DATA SELECT SW1 Settings

| Setting | Data Mode | Setting | Data Mode |
|---------|--------------------------------------|---------|----------------------------|
| 0 | Not Configured or Auto Configuration | 8 | RS485 two -wire, 2V offset |
| 1 | RS232 | 9 | RS485 four-wire standard |
| 2 | RS232 with handshake | A | RS485 four-wire, 1V offset |
| 3 | TTL | B | RS485 four-wire, 2V offset |
| 4 | RS422 two-wire | C | Not used |
| 5 | Manchester/Biphase | D | Not used |
| 6 | RS485 two-wire Standard or SensorNet | E | Receiver Test mode |
| 7 | RS485 two -wire, 1V offset | F | Transmitter Test mode |

2.3.2 AUTO DATA CONFIGURATION

The S751DA modules can be set for Auto Data Configuration, where the format of the data on channel 1 is controlled from one unit, either the transmitter or the receiver.

To use the Auto Data Configuration feature, set the DATA SELECT switch SW1 on one unit to position 0 (default setting). Set the DATA SELECT switch SW1 on the other unit to the desired format.

If the data format needs to be changed for a particular channel, only the DATA SELECT switch on one unit need to be changed. The other unit remains in position 0 and will auto-configure according to the selected data format.

2.4 OPTICAL ALARM

Rack cards are supplied with an alarm function that activates if the optical signal input to the module fails. This alarm can be output to the rack power supply, where an audible alarm and alarm output contact closure can be activated.

The optical alarm is controlled using DIP switch SW3 on the data card. Switch SW3-1 enables the FIBER (optical) alarm (SW3-2 is not used). The alarm is ENABLED at the factory with DIP switch SW3-1 set to the ON position. See Figure 1 and Figure 2.

If the optical alarm output is not desired, set DIP switch SW3-1 to the OFF position.

NOTE: Setting ALARM switch SW3-1 to the OFF position does not affect the operation of the LEVEL/LOSS LED. A red LED always indicates signal loss.

2.5 AUDIO LEVEL

The S751DA system features dual audio level operation to meet the system requirements of -10 dBu audio reference and 0 dBu/+4 dBu audio reference level. All units are shipped with the audio level switches set to 18 dBu (0 dBu audio reference level). At this setting, the 18 dB of operating range will support maximum audio levels of +18 dBu.

If a low audio input level causes the output audio signal to degrade, the input sensitivity of the S751DA can be increased by switching to the 8 dBu maximum scale. Switches SW5 and SW7 on the audio/data card select this function. See Figure 1 and Figure 2.

For systems running at -10 dBu, typical for VCRs and DVD players, switches SW5 and SW7 should be set to 8 dB.

The user has the added option of setting the transmitter input to 8 dBu and the receiver output to 18 dBu. This will add 10 dB of gain to the system, and increase system signal-to-noise ratio (S/N).

2.6 INPUT IMPEDANCE

The S751DA units are shipped with the input impedance set at high impedance (high-Z). To select a 600 Ω input impedance in place of the high-Z input, set switch SW6 on the audio/data card to 600. See Figure 1 and Figure 2.

3 INSTALLATION

This fiber-optic link is supplied as a rack card. The rack cards can also be used in a standalone configuration if placed in a 501R rack card enclosure.

Units should be installed in dry locations protected from extremes of temperature and humidity.

3.1 RACK CARDS

Rack cards are installed in a 19-inch (483-mm), EIA standard card-cage rack, either the 515R1 or the 517R1. Follow these guidelines to install rack cards.



CAUTION:

Although rack cards are hot-swappable and can be installed without turning off power to the rack, the power switch on the rack power supply should be turned off and that the rack power supply disconnected from any power source before installing rack cards.

-
- 1) Make sure that the card is oriented right-side up, and slide it into the card guides in the rack until the edge connector at the back of the card seats in the corresponding slot in the rack's connector panel. Seating may require thumb pressure on the top and bottom of the card's front panel.



CAUTION:

Do not press on any of the LEDs when installing cards into the rack. Equipment damage may result.

-
- 2) Tighten the two thumbscrews on the card until the front panel of the card is seated against the front of the rack.

3.2 501R RACK CARD ENCLOSURES

Follow these guidelines to install rack cards in the 501R rack card enclosure.



CAUTION:

The rack card module can be powered only by 13.5 - 16 VDC. AC power must not be used. It is recommended that the 613P power adapter be used to supply power to the module. Damage to the equipment may result if AC power is used.



CAUTION:

Complete all instruction steps before supplying power to the unit.

- 1) Look inside the enclosure to determine the location of the socket for the edge connector on the card. Orient the card so that it will seat in the socket, and slide it into the card guides in the enclosure until the edge connector at the back of the card seats in the socket. Seating may require thumb pressure on the top and bottom of the card's front panel.

**CAUTION:**

Do not press on any of the LEDs when installing cards into the enclosure. Equipment damage may result.

- 2) Tighten the two thumbscrews on the card until the front panel of the card is seated against the front of the enclosure.
- 3) Determine where the module will be installed, and ensure that there is adequate space for making the various cable connections and for reading the diagnostic LEDs. See Figure 3.

NOTE: The type of screws chosen must be suitable for the surface on which the module is to be mounted.

- 4) Standalone modules can be attached to suitable flat surfaces with four No. 6 (3 mm) screws. After the enclosure is securely attached to a flat surface, the cable connections can be made.

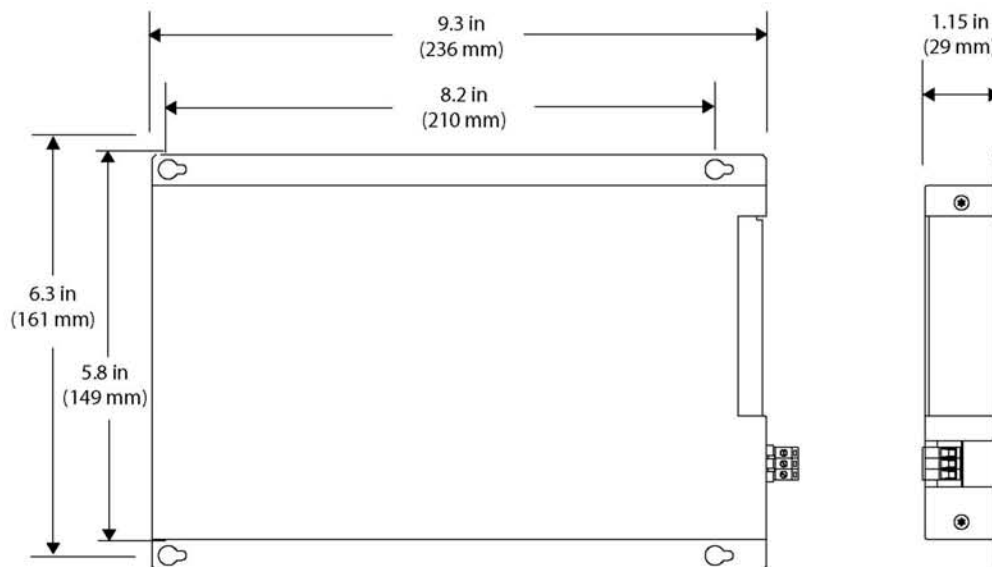


Figure 3. 501R Rack Card Enclosure Mounting Data

3.3 CONNECTIONS

All audio, data, contact, and fiber connections are made to the back panel of the S751DA module. When connecting audio, data, or contact signals, always wire the signal OUT pins on the audio/data equipment to the signal IN pins on the fiber links, and the signal IN pins on the audio/data equipment to the signal OUT pins on the fiber links. See Figure 4.


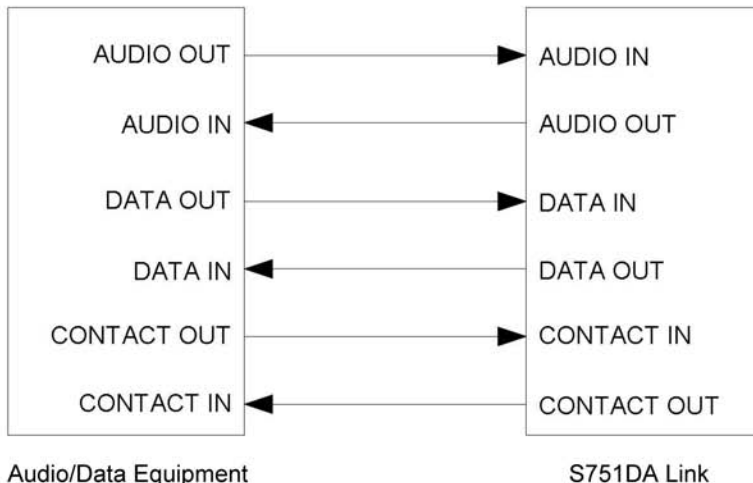


Figure 4. S751DA Fiber Link Audio – Data – Contact Connections

3.3.1 BACK PANEL CONNECTIONS

Audio, data, and contact signals can be connected directly to the unit by wiring a 26-pin male D-connector (AMP plug part number 748474-1, pin part number 748333-4) and attaching it to audio/data connector J4 on the back panel of the unit. See Figure 5. Table 3 lists the signal and pin information.

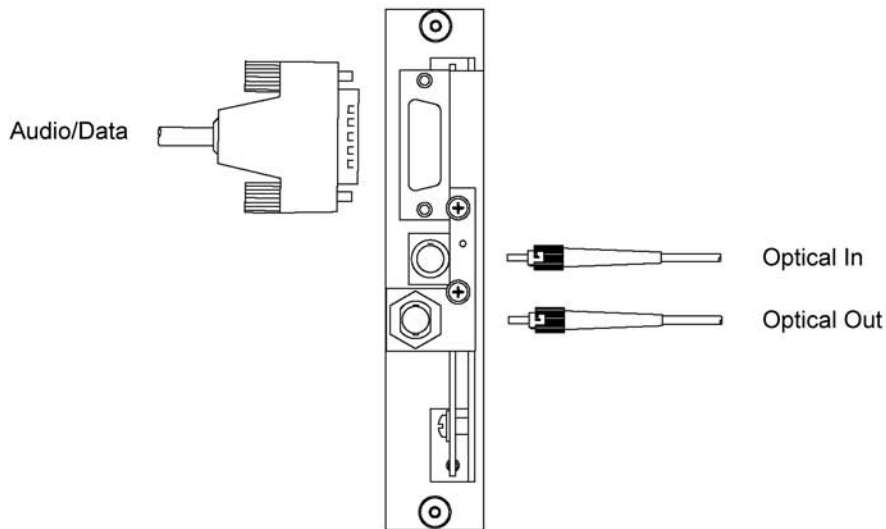

Note: Optical In connector is not present on 1-Fiber models.

Figure 5. S751DA 2-Fiber Module Back Panel Connections

Table 3. J4 Audio/Data Connections

| Pin | Signal | Pin | Signal |
|-----|---------------|-----|---------------|
| 1 | AUDIO OUT + | 14 | AUDIO IN - |
| 2 | GROUND | 15 | NO CONNECTION |
| 3 | NO CONNECTION | 16 | GROUND |
| 4 | CONTACT IN + | 17 | DATA OUT - |
| 5 | AUDIO IN + | 18 | DATA IN - |
| 6 | NO CONNECTION | 19 | NO CONNECTION |
| 7 | DATA OUT + | 20 | CONTACT OUT + |
| 8 | DATA IN + | 21 | CONTACT OUT - |
| 9 | NO CONNECTION | 22 | +5 VDC BIAS |
| 10 | NO CONNECTION | 23 | GROUND |
| 11 | AUDIO OUT - | 24 | NO CONNECTION |
| 12 | NO CONNECTION | 25 | NO CONNECTION |
| 13 | NO CONNECTION | 26 | NO CONNECTION |

3.3.2 INTERFACE BOARD CONNECTIONS

The S751DA units are also supplied with an interface board that attaches directly to the back of the module. The interface board contains screw terminal connectors for the audio, data, and contact inputs and outputs. Refer to Figure 6 and Table 4 through Table 14 for interface board wiring information.

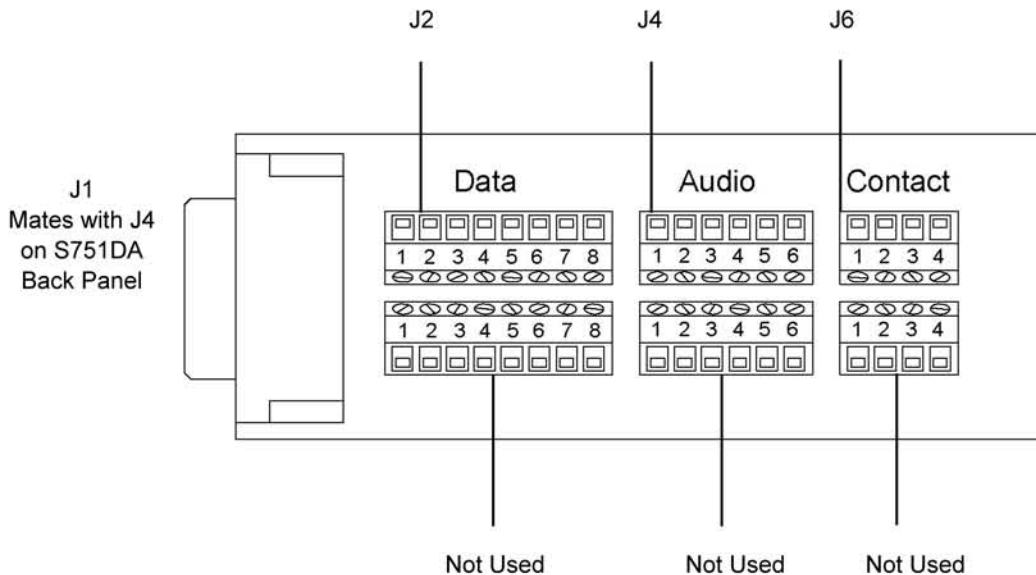


Figure 6. S751DA Interface Board

Table 4. Interface Board Connections

| Pin | Signal |
|---------------------|-------------------------|
| Connector J2 | |
| 1 | GROUND |
| 2 | DATA CHANNEL 1 OUT + |
| 3 | DATA CHANNEL 1 OUT - |
| 4 | +5 VDC BIAS |
| 5 | DATA CHANNEL 1 IN + |
| 6 | DATA CHANNEL 1 IN - |
| 7 | TERMINATION |
| 8 | GROUND |
| Connector J4 | |
| 1 | AUDIO CHANNEL 1 IN + |
| 2 | AUDIO CHANNEL 1 IN - |
| 3 | GROUND |
| 4 | AUDIO CHANNEL 1 OUT + |
| 5 | AUDIO CHANNEL 1 OUT - |
| 6 | GROUND |
| Connector J6 | |
| 1 | CONTACT CHANNEL 1 IN + |
| 2 | CONTACT CHANNEL 1 IN - |
| 3 | CONTACT CHANNEL 1 OUT + |
| 4 | CONTACT CHANNEL 1 OUT - |

Table 5. J2 Connections for RS232 Data

| Pin | Signal |
|-------------------------|---------------|
| 1 | GROUND/SHIELD |
| 2 | RS232 OUT |
| 3 | NO CONNECTION |
| 4 | NO CONNECTION |
| 5 | RS232 IN |
| 6 | NO CONNECTION |
| 7 | NO CONNECTION |
| 8 | GROUND |
| SW1 – Position 1 | |

Table 6. J2 Connections for RS232 Data with Handshaking

| Pin | Signal |
|-------------------------|---------------|
| 1 | GROUND/SHIELD |
| 2 | RS232 OUT |
| 3 | RTS/CTS OUT |
| 4 | NO CONNECTION |
| 5 | RS232 IN |
| 6 | RTS/CTS IN |
| 7 | NO CONNECTION |
| 8 | GROUND |
| SW1 – Position 2 | |

Table 7. J2 Connections for TTL Data

| Pin | Signal |
|-------------------------|---------------|
| 1 | GROUND/SHIELD |
| 2 | NO CONNECTION |
| 3 | TTL OUT |
| 4 | NO CONNECTION |
| 5 | TIE TO PIN 1 |
| 6 | TTL IN |
| 7 | NO CONNECTION |
| 8 | GROUND |
| SW1 – Position 3 | |

Table 8. J2 Connections for RS422 Data

| Pin | Signal |
|-------------------------|---------------|
| 1 | GROUND/SHIELD |
| 2 | RS422 OUT - |
| 3 | RS422 OUT + |
| 4 | NO CONNECTION |
| 5 | RS422 IN - |
| 6 | RS422 IN + |
| 7 | NO CONNECTION |
| 8 | GROUND |
| SW1 – Position 4 | |

Table 9. J2 Connections for Manchester/Biphase Data

| Pin | Signal |
|-------------------------|--------------------------|
| 1 | MANCHESTER/BIPHASE OUT - |
| 2 | MANCHESTER/BIPHASE OUT + |
| 3 | NO CONNECTION |
| 4 | NO CONNECTION |
| 5 | MANCHESTER/BIPHASE IN - |
| 6 | MANCHESTER/BIPHASE IN + |
| 7 | NO CONNECTION |
| 8 | GROUND |
| SW1 – Position 5 | |

Table 10. J2 Connections for Manchester/Biphase Termination Unit Data

| Pin | Signal |
|-------------------------|----------------------------|
| 1 | MANCHESTER/BIPHASE OUT - |
| 2 | MANCHESTER/BIPHASE OUT + |
| 3 | NO CONNECTION |
| 4 | NO CONNECTION |
| 5 | MANCHESTER/BIPHASE IN - |
| 6 | MANCHESTER/BIPHASE IN + |
| 7 | TERMINATION - TIE TO PIN 5 |
| 8 | GROUND |
| SW1 – Position 5 | |

Table 11. J2 Connections for RS485 2-Wire Data

| Pin | Signal |
|---|----------------------------|
| 1 | GROUND/SHIELD |
| 2 | NO CONNECTION |
| 3 | NO CONNECTION |
| 4 | +5 VDC BIAS OUT |
| 5 | RS485 - |
| 6 | RS485 + |
| 7 | TERMINATION – TIE TO PIN 5 |
| 8 | GROUND |
| SW1 – Position 6 (standard offset) Position 7 (1V offset) Position 8 (2V offset) | |

Table 12. J2 Connections for RS485 4-Wire Data

| Pin | Signal |
|---|----------------------------|
| 1 | GROUND/SHIELD |
| 2 | RS485 OUT - |
| 3 | RS485 OUT + |
| 4 | +5 VDC BIAS OUT |
| 5 | RS485 IN - |
| 6 | RS485 IN + |
| 7 | TERMINATION – TIE TO PIN 5 |
| 8 | GROUND |
| SW1 – Position 9 (standard offset) Position A (1V offset) Position B (2V offset) | |

Table 13. J2 Connections for SensorNet Data

| Pin | Signal |
|-------------------------|----------------------------|
| 1 | GROUND/SHIELD |
| 2 | NO CONNECTION |
| 3 | NO CONNECTION |
| 4 | +5 VDC BIAS OUT |
| 5 | SENSORNET - |
| 6 | SENSORNET + |
| 7 | TERMINATION – TIE TO PIN 5 |
| 8 | GROUND |
| SW1 – Position 6 | |

Table 14. J2 Connections for Test Mode Loopback

| Pin | Signal |
|-------------------------|---------------|
| 1 | NO CONNECTION |
| 2 | TIE TO PIN 5 |
| 3 | TIE TO PIN 6 |
| 4 | NO CONNECTION |
| 5 | TIE TO PIN 2 |
| 6 | TIE TO PIN 3 |
| 7 | NO CONNECTION |
| 8 | GROUND |
| SW1 – Position F | |

3.3.3 BUILT-IN TERMINATION

The S751DA features a built-in termination on the Interface Board for RS485, Manchester, Biphase, and SensorNet installations. Refer to Table 4, and Table 10 through Table 13.

3.3.4 AUDIO CONNECTIONS

Audio input and output signals are connected to the 26-pin connector located on the back of the module, or to the screw terminal connectors on the Interface board supplied with the unit.

NOTE: Signal strength remains the same regardless of type of connection.

Audio connection options include:

- Balanced transmitter input to balanced receiver output
- Balanced transmitter input to unbalanced receiver output
- Unbalanced transmitter input to unbalanced receiver output
- Unbalanced transmitter input to balanced receiver output

For a balanced connection, connect the external equipment to the (+) and (-) pins of the desired channel. For an unbalanced connection, add a short jumper between the (-) pin and the ground pin. See Figure 5 and Figure 6. Refer to Table 3 and Table 4 for wiring information.

3.3.5 FIBER OPTIC CABLE CONNECTIONS

Most cable manufacturers identify the individual fibers in the cable. Select appropriately terminated fiber and mark both ends with a unique identification label (e.g. for cable no. 03, fiber no. 08) to ensure that the fiber connected to the near end is the same as the one connected to the far end.

The proper optical connection will link the transmitter's TRANSMIT (OUT) port to the receiver's RECEIVE (IN) port. See Figure 5.

- 1) Wipe the inside of the port's sleeve with a lint-free pipe cleaner moistened with reagent-grade isopropyl alcohol. Blow dry with dry air.
- 2) Clean the connector using a lint-free cloth dampened with reagent-grade isopropyl alcohol. Thoroughly wipe the side and end of the ferrule. Blow the ferrule dry with dry air. Visually inspect the ferrule for lint.
- 3) Fasten the fiber optic cable to the port.

3.3.6 STANDALONE MODULE POWER CONNECTIONS



CAUTION:

Standalone modules can be powered only by 13.5 - 16 VDC. AC power must not be used. Damage to the equipment will result.

The 501R rack card enclosure has a removable screw terminal connector for the electrical input connection. Pin 1 of this connector is the GROUND terminal, pin 2 is not used, and pin 3 is the +DC terminal as marked on the enclosure. Connect the input power as follows.

- 1) Identify the power connector and remove it from the module.
- 2) Make sure the power supply is not connected to any power source, and strip approximately 0.25 inches (6 mm) of insulation from the ends of the cable.

- 3) Taking care to observe the correct polarization of the cable, insert one lead into one of the screw sockets and tighten the screw. Confirm the security of the connection with a light pull on the cable.
- 4) Repeat step 3 for the other conductor.
- 5) Seat the connector in its position in the fiber unit.
- 6) Plug the power supply into a suitable outlet.
- 7) Power up the peripheral equipment and verify system operation by observing video on the monitor at the receiver end.

3.3.7 RACK MODULE POWER CONNECTIONS

Power connections are made automatically when the card is installed. To supply power to the rack, connect the rack power supply to an AC outlet and set the power switch to ON.

4 OPERATION

4.1 NORMAL OPERATION

S751DA fiber links operate automatically after installation. Refer to paragraph 4.2 for details on how to execute the test mode. For description of LED color codes and an explanation of how to diagnose system faults using the LEDs built into the units, refer to section 5, Troubleshooting.

4.2 TEST MODE

The Test mode enables you to verify the operation of the audio, and data circuits in the S751DA units, as well as the fiber connection from the S751DA transmitter to the S751DA receiver.

To execute the test mode

Note: DATA SELECT switch SW-1 can be set to position F to enable the 1 kHz test tone generator to verify and audio operation.

- 1) Set the DATA SELECT switch on the S751DA you are testing to F (TX Test Mode). At this end only, wire the data connections as follows (refer to Table 14):
 - Connect the DATA IN+ pin to the DATA OUT+ pin.
 - Connect the DATA IN- pin to the DATA OUT- pin.
- 2) At the opposite end, set the DATA SELECT switch on the S751DA to E (RX Test Mode).
- 3) The transmitting unit should operate as follows:
 - ENABLED LED is RED, indicating that a valid data format has not been selected.
 - DATA OUT LED is slowly flashing between amber, green, and off. This indicates that the test mode is generating an output pattern and sending it out on copper.
 - DATA IN LED should mimic the DATA OUT LED. This indicates a good, proper loopback connection, and proves that the data transmit/receive circuitry is working properly.
 - LEVEL/LOSS might be red or green indicating received fiber signal strength.
- 4) The receiving unit should operate as follows:
 - ENABLED LED is GREEN indicating a valid data format is selected.
 - DATA OUT LED should slowly flash amber, green, off. This indicates that the fiber path from the unit set for Test mode is reliable.
 - DATA IN LED should be OFF indicating there is no input copper connection made.
 - LEVEL/LOSS LED should be green to off (but not red), indicating that sufficient optical power is being received.
 - The AUDIO OUT LEDs should be green indicating sufficient audio output signal level.
- 5) In addition to the LED operation described above, verify a 1 kHz test tone is emitted on the audio system connected to the receiving unit

After the test has been performed at one end, swap switch positions and connectors to perform the test on the other end. If the test is successful, the copper-in-to-fiber-to-copper-out conversion is working in both directions.

5 TROUBLESHOOTING

5.1 LED OPERATION

The S751DA modules have built-in Status Monitoring And Reliability Test System (SMARTS™) diagnostic capabilities that include LED indicators for monitoring data and optical status. The S751DA fiber units have LED indicators that describe the current state of operation; the current status of audio and data signals; and fiber optic signal strength.

These indicator pairs are LASER and LEVEL/LOSS, AUDIO IN/OUT, DATA IN/OUT, CONTACT IN/OUT, and ENABLED IN/OUT. See Figure 7. The operation of the front panel LEDs is described in the following paragraphs.

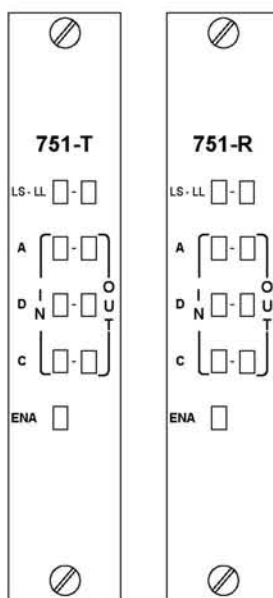


Figure 7. Front Panel LEDs

5.1.1 LASER (LS) INDICATOR

A green LASER LED indicates the laser is operating normally. A red LASER LED indicates the laser is malfunctioning.

5.1.2 LEVEL/LOSS (LL) INDICATOR

This LED indicates the relative optical signal strength received at the module. When sufficient optical power is being received, the LED is green. As the optical power decreases, as happens through long fiber runs, splices or connections, the LEVEL/LOSS LED stays green until the optical power drops below the minimum level.

The LEVEL/LOSS LED will turn bright red to indicate an insufficient amount of optical power is being received. All data will default to its failure state level to eliminate bus contention.

5.1.3 AUDIO (A) IN/OUT INDICATORS

The AUDIO IN (or OUT) LED indicates the strength of the audio signal by varying in intensity. The AUDIO IN LED remains green as long as an adequate audio signal level is being input to the module.

If the audio input becomes too weak, the LED will turn off. The LED will be red when the audio level is clipped.

The AUDIO OUT LED performs a similar function, except that it refers to the audio output from the module.

5.1.4 DATA (D) IN/OUT INDICATORS

The DATA IN LED indicates the level of the data signal being input to the S751DA over copper. A green DATA IN LED indicates a logic HIGH is present on the data inputs.

An amber DATA IN LED indicates a logic LOW is present on the copper. No color (OFF) indicates a tri-state or high impedance input.

This LED can be used to determine the resting state of your equipment and, in the RS485 states, verify that a tri-state is being detected properly.

The S751DA has special circuitry to capture data transitions and make them visible on the LEDs. High-speed bursts of activity, previously undetectable by standard LED circuits, are easily seen by this special circuitry.

The DATA OUT LED functions identically to the DATA IN LED except that the LED represents data that is being output from the unit. This LED has the same high-speed capture circuitry as the DATA IN LED.

5.1.5 CONTACT (C) IN/OUT INDICATORS

The CONTACT IN/OUT LEDs indicate the presence of relay/contact closure signals. A green CONTACT IN/OUT LED indicates a closed relay contact, and a red LED indicates an open relay contact.

5.1.6 ENABLED (ENA) IN/OUT INDICATORS

The ENABLED LED has five states as follows:

- Green indicates a valid mode has been selected.
- Red indicates an invalid mode (spare or TEST mode) has been selected.
- Flashing red/green indicates that no mode has been selected.
- Flashing green/off indicates a valid mode is configured remotely.
- Flashing red/off indicates either an invalid mode or the Test mode is configured remotely.

5.2 TROUBLESHOOTING

Table 15 contains troubleshooting information for the S751DA units.

Table 15. Troubleshooting

| Problem | Probable Cause | Solution |
|---------------------------------------|--|--|
| Red LASER LED | Laser is malfunctioning | Replace module |
| Red LEVEL/LOSS LED | Fiber not connected | Connect fiber to receiver and transmitter |
| | Transmitter/Receiver not powered up | Connect and apply power to module |
| AUDIO IN/OUT LED is OFF | Audio input not connected to module | Connect audio input to module |
| | Audio source not powered up | Apply power to audio source |
| | Audio source not transmitting | Check audio source and cabling |
| DATA IN LED is OFF | Tri-state condition | No action required |
| | Data input not connected to module | Connect data input to module |
| | Data source not powered up | Apply power to data source |
| | Data source not transmitting | Check data source and cabling |
| Red ENABLED IN/OUT LED | Test or invalid mode selected | Set DATA SELECT switch to valid format |
| ENABLED IN/OUT LED flashing red/green | Both Transmitter and Receiver set to Auto Configure mode | Set Transmitter or Receiver DATA SELECT switch to valid format |
| ENABLED IN/OUT LED flashing red/off | Invalid or Test mode configured remotely | Set DATA SELECT switch to valid format if not in Test mode |

APPENDIX A: RS485 APPLICATION NOTES

A.1 INTRODUCTION

The S751DA is configurable for both full-duplex (four-wire) and half-duplex (two-wire) operation. It can be used for interfacing to systems adhering strictly to the RS-485 specification and for use with systems that use a modified, "fail-safe biased" RS-485 bus.

A.2 CONNECTION

Use high-quality twisted-pair wiring, and make sure all connection points are clean and tight. A loose connection on one of the wires can appear to function, yet cause intermittent errors: DATA LEDs may be flashing as signals pass through the system, but those signals will be corrupt.

A.3 CONFIGURATION

The S751DA multi-protocol data (MPD) units are designed to work with virtually any RS485 system. Unfortunately, some systems operate on a "modified" version of RS485 that use a fail-safe biasing to pull up/down their bus during a tri-state condition. In a standard RS485 system, when a driver on a properly terminated bus goes into tri-state, the voltage between the differential outputs should be less than 200 mv.

(This is considered "standard offset" in the product instruction manuals.) A differential output tri-state voltage this small can cause some non-standard systems to latch up, because they are designed for much larger, "fail-safe," offsets.

To be able to interface to such equipment, the S751DA MPD units offer two more "offset" level modes. In most cases, the S751DA unit should be configured for "standard offset" operation.

When the system is operating properly, the DATA IN and DATA OUT LEDs are off when there is no communication (tri-state) and flash when data is being sent or received. If the link is not functioning properly (LEDs will most likely not turn off), change the DATA SELECT switch on the unit to a higher offset mode.

First try 1 V, then 2 V. If switching the mode switch does not prove effective, the offset level may have to be emulated at one end of the system by using pull-up/down resistors on the data connector. The S751DA has a +5 V bias pin and ground pins on the connector for this purpose. Contact the equipment manufacturer's technical support for recommended resistor values and configuration.

A.3 TERMINATION

RS485 systems need to be properly terminated in order to work reliably. Two terminating resistors are used on each RS485 bus, at the farthest ends of the link.

These resistors should be attached to the data/audio connector on the back of the unit if the S751DA link is at one end of the bus. If the terminating resistors are left out, the tri-state condition will not be detected, and the bus might lock up. If there are too many terminations on the bus, signal levels might drop too low, or driver circuitry might fail. The standard value of terminating resistors for RS485 is 120Ω.

Customer Support

For assistance in installing, operating, maintaining, and troubleshooting this product, refer to this document and any other documentation provided. If you still have questions, please contact technical support during normal business hours (Monday through Friday, excluding holidays, between 6 a.m. and 5 p.m. Pacific Time).

GE Security

Call: 888 437-3287 (US, including Alaska and Hawaii; Puerto Rico; Canada)

Outside the toll-free area: 503 885-5700

Fax: 561 998-6224

www.gesecurity.com



GE Security

www.GESecurity.com

U.S.

T (561) 998-6100

T 888-GE-SECURITY

888 (437-3287)

F 561 998-6224

E gesecuritycustserv@ge.com

Asia

T 852-2907-8108

F 852-2142-5063

Australia

T 613-9239-1200

F 613-9239-1299

Canada

T 519-376-2430

F 519-376-7258

Europe

T 44-113-238-1668

F 44-113-253-8121

Latin America

T 305-593-4301

F 305-593-4300